



# SPS - 22 & SPW - 32 ASSEMBLY INSTRUCTIONS

## PARTS

 B x 4	 S x 4	 D x 4	 L x 4 (SPS-22) L x 2 (SPW-32)	 T x 2	 LP x 1 (SPW-32)	 BJ x 1	 SL . SR x 1
					 ST x 2	 DL x 1	 DR x 1

